


## MELAMINE FACED CHIPBOARD

Consist of wood chips bonded together with melamine laminate surface finish. The standard thickness in the industry is 25mm. The finishing comes with 1.0mm ABS edge band protection against accidental bumps or scrapes. Moderate strength and not suitable for wet area. An economical option ideal for light-duty work.



### TECHNICAL SPECIFICATIONS

- **Thickness:** 18mm, 25mm
- **Colours:** White, Black, Light Grey, Dark Grey and various woodgrain colours available
- **1 year** manufacturer warranty

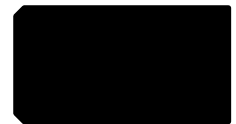

Square Edged

### MAINTENANCE & CARE GUIDLINES

Clean the surface just with a soft sponge or soft rag - (DO NOT use the abrasive "green" side of the sponge). Use common household cleaners without abrasives like detergent or window cleaner.

Always wipe dry with kitchen towel or dry cloth. Any prolonged exposure to liquids will damage the worksurface.

We recommend instituting a regimen of monthly or quarterly inspections of all surfaces plus daily or weekly cleanings to maintain your worksurface's original finish and to help ensure a safe, uncontaminated working environment. The following list contains items you may wish to have on-hand for regular cleaning and to handle most problems that may occur.

- Clean rags or sponges (always use moist, not wet)
- Mild soap or household cleaners

Note: Never use wax or polish containing wax. Also never use abrasive pads, sponges, powders or liquids (such as Soft Scrub) as surface damage will occur.